

HYPHEN MANUAL



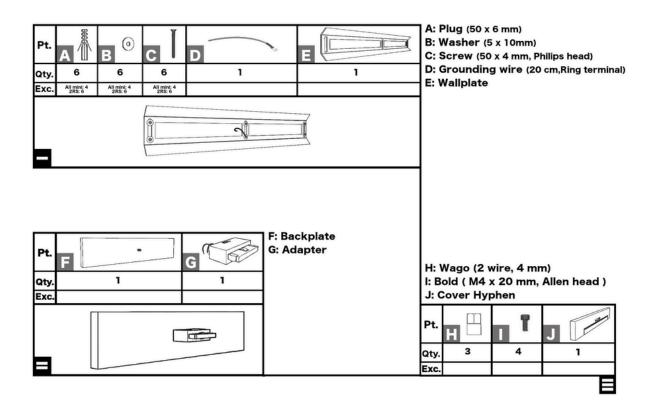


Toolings

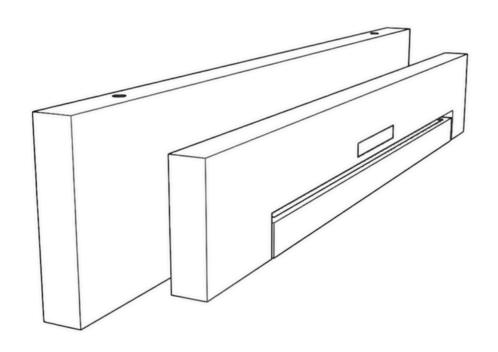

Position the Wall Plate:

- 1) Hold the wall plate at the desired location.
- 2) Use a spirit level to ensure it is level.
- 3) Align power cables with the openings in the wall plate.
- 4) Mark the drill points through the wall plate openings with a pencil.

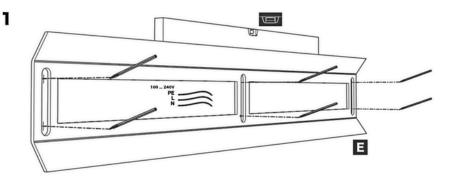




Drill the Holes:


1) Use a 6mm diameter drill bit. 2) Drill the marked holes perpendicular to the surface.




Insert Plugs and Secure the Wall Plate:

- 1) Insert a plug into each drilled
- 2) Position the wall plate.
- 3) Place a washer over each screw. 4) Attach the grounding wire with
- an eyelet over one of the screws.
- 5) Secure all screws using a Phillips (PZ2) screwdriver.
- 6) You can insert the grounding screw in the middle or any other screw as needed.

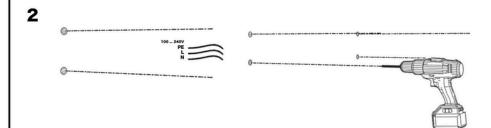

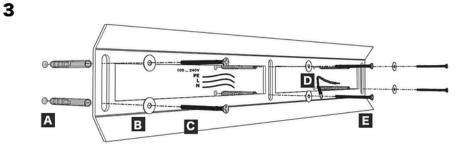

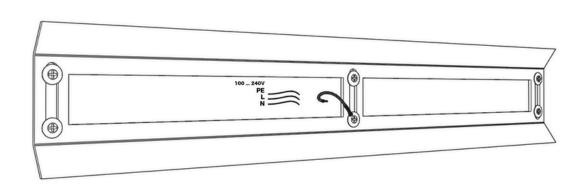

Toolings

Connect the backplate:

- 1) Use a Wago connector to connect the ground wire to the grounding terminal on the wall plate.
- plate.

 2) Use Wago connectors to join the neutral wire (N) to the blue wire.
- 3) Use Wago connectors to join the live wire (L) to the brown wire.
- 4) Place the back plate over the wall plate.





Secure the backplate:

- 1) Use the Allen key provided to screw the two top bolts into the holes on the back plate.
- 2) Adjust the back plate slightly left or right if needed.
- 3) Secure the back plate by hand-tightening the bottom bolts.

Installing the Cover on the Adapter


- 1) Slide the cover over the adapter carefully.
- 2) Apply even pressure on both sides until the cover snaps securely into place.

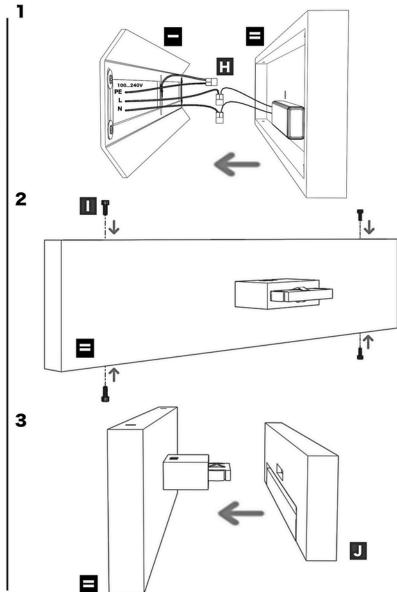

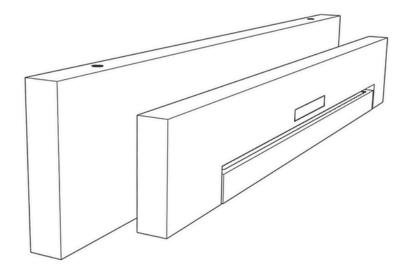


Unlocking and Removing the Adapter

1) Turn the wheel counterclockwise (CCW) to unlock the adapter.

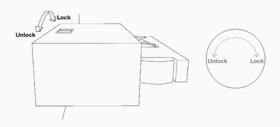


- a) To remove adapter:
 - 2) Take off the backplate.
 - 3) Disconnecting the wiring from the adapter. (see below)
 - 4) Keep turning CCW until the adapter is loose.
 - 5) Pull the wires out to remove the adapter.

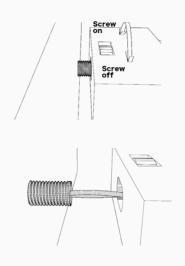

Disconnecting the Wiring from the Adapter

- b) To change the angle of the Hyphen:
 - 2) Rotate the adapter to the desired angle.
 - 3)Turn the wheel clockwise (CW) to lock the adapter in place.

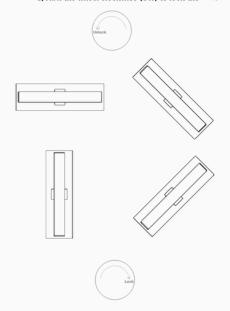

- 1) Open the Wago connectors.
- 2) Remove the wires (A) from the connectors.

